



RJ31H Series

STANDARDS

ANSI 107-2020 • TYPE R CLASS 3

Waterproof — ANSI 107-2020: AATCC 127

Waterproof polyester shell with zip out polar fleece liner // Heated jacket with 3 warming zones; 2 in front and 1 in back // Choice of three temperature settings // Lightweight power bank included // Zipper front closure with concealed detachable drawstring hood // 2" silver reflective striping // Elastic band at waist and wrists // Interior access zipper for print customization // Cell phone/radio chest pocket with clear panel // 2 mic tabs



WARMING ZONES

POCKETS
5 OUTER, 3 INNER

RJ3110H •

S-5XL



STANDARDS

ANSI 107-2020 TYPE R CLASS 3 Not FR Waterproof - ANSI 107-2020: AATCC 127

SPECS

MATERIALS

Jacket 300D polyurethane (PU) coated waterproof polyester shell

100% polyester

Interior 220gsm fleece

Nylon-lined sleeves

Inner Lining 210T taffeta Reflective Tape

Generic silver

Wrists Waterproof elastic band

CLOSURE

Front SBS zipper

100% polyester fabric Zipper Tape

Zipper Teeth Resin Zipper Slider Hood Drawstring

REFLECTIVE STRIPING

One 2" silver reflective stripe applied horizontally across lower chest dividing black material from lime material

Two 2" silver reflective stripes applied vertically from top of horizontal stripe, over shoulders, to top of horizontal stripe on back

Two 2" silver reflective stripes applied around each sleeve

POCKETS

One outer right chest zipper pocket: 6.3" x 7.8"

One outer left chest clear badge holder pocket with hook and loop closure: 6" x 3.5"

One outer left arm split pencil pocket: 3" x 5"

Two outer lower slash pockets zipper closure: 7.8" x 6.3"

One inner right chest pocket with zipper closure: 5.9" x 7"

One inner right chest pocket with hook and loop closure: 5.9" x 7"

POWER BANK

USB 5000mAh power bank and charging cable included

Average battery life: high: 2.5 hours | medium: 3.5 hours | low: 4.5 hours

Jacket is compatible with any USB power bank

JACKET MEASUREMENTS

	S	М	L	ХL	2 X	3 X	4 X	5 X
Chest	26"	27"	28"	29"	30"	31"	33"	34.5"

Jacket measurements are taken while garment is lying flat. Please note: some size variation may occur.

WASHING INSTRUCTIONS



Hand wash cold



Use mild detergent



Air dry



Do not bleach



Do not iron



Do not force, knead, or beat

Max 25 washes

USER INSTRUCTIONS AND WARNINGS

USER INSTRUCTIONS

- 1. Fully charge the power bank prior to use with the jacket.
- 2. Identify the USB plug located in the inside left chest pocket of the jacket.
- 3. Plug the USB into the power bank and ensure power bank is on.
- 4. Press/hold down the temperature control button located above the pocket for 2 seconds.
- 5. When the red light is visible, heating feature is on.
- 6. Press the temperature control button to change the heat setting: red is high, white is medium, and blue is low.
- 7. Press the temperature control button for 2 seconds to switch off. The light will turn off and the heat feature will stop.

WARNINGS

- 1. Do not use the heating feature if the power bank has not been plugged into the USB for over 2 years.
- 2. Do not use high temperature water or strong detergent when washing the jacket.
- 3. The jacket shell is waterproof, but the USB port and power bank are not waterproof. Do not use the heating feature or keep the power bank plugged into the USB port if the jacket gets wet. Turn off the power and stop using if the jacket is wet.
- 4. The use time depends on the capacity of the power bank and the heat setting.



HEAT SETTINGS

High | Warmest

■ WHITE Medium | Warmer

BLUE Low | Warm